

200Wのハイパワー！屋外でも使用可能な防水仕様
高輝度と放熱性能の両立を実現したCOB-LED搭載

Cobra

防水仕様 200W-COB・RGBW 4色一体型

- 50W-COB×4 灯搭載 出力：200W
- 標準照射角度：20度
- DMX-512/4ch&8ch
- 防水仕様 (IP65) 重量：4.9kg

CobraW

防水仕様 200W-COB・ホワイト (5600K)

- 50W-COB×4 灯搭載 出力：200W
- 標準照射角度：20度
- DMX-512/2ch&4ch
- 防水仕様 (IP65) 重量：4.9kg



ディスプレイパネルの操作方法

A(MENU) →メニューを順番に呼び出します。

B(UP) →メニュー番号、コマンドを順に呼び出します。

C(DOWN) →メニュー番号、コマンドを逆に呼び出します。

D(ENTER) →選ばれたメニューを選択実行、保存します。

[A Mode]



8ch (DMX/001-512)

滑らかな調光スピード
BまたはCボタンで任意の数値に設定します。

[d Mode]



4ch (DMX/001-512)

滑らかな調光スピード
BまたはCボタンで任意の数値に設定します。

[H Mode]



8ch (DMX/001-512)

早い調光スピード
BまたはCボタンで任意の数値に設定します。

[h Mode]



4ch (DMX/001-512)

早い調光スピード
BまたはCボタンで任意の数値に設定します。

[TB Mode]



Autoモード 1 (00-99)

BまたはCボタンで
任意の数値(速度)を設定します。

[ZB Mode]



Autoモード 2 (00-99)

BまたはCボタンで
任意の数値(速度)を設定します。

[ZH Mode]



Autoモード 3 (00-99)

BまたはCボタンで
任意の数値に設定します。

[JLBE Mode]



AutoSOUNDモード

BまたはCボタンで
任意の数値に設定します。


[Red Mode]



Red (0-255)

BまたはCボタンで色合いを
任意の数値に設定します。

[Green Mode]

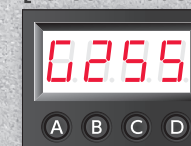

Green (0-255)

BまたはCボタンで色合いを
任意の数値に設定します。

[Blue Mode]



Blue (0-255)

BまたはCボタンで色合いを
任意の数値に設定します。

[White Mode]



White (0-255)

BまたはCボタンで色合いを
任意の数値に設定します。

DMX channel

8ch / 4ch

8channel instruction

No	Function	instruction
1	Master	R.G.B.W Master dimming. From dark to bright
2	Master strobe	R.G.B.W Master Strobe.from fast to slow
3	Function selection	0-50 DMX 9 channel control. 51-100 saltus step. 101-150 gradual change. 151-200 pulse change. 201-255
4	Function speed	Function speed. from slow to fast
5	Red	Red dimming. liner light. from dark to bright
6	Green	Green dimming. liner light. from dark to bright
7	Blue	Blue dimming. liner light. from dark to bright
8	White	White dimming. liner light. from dark to bright

4channel instruction

No	Display	Function
1	Red	Red dimming. liner light. from dark to bright
2	Green	Green dimming. liner light. from dark to bright
3	Blue	Blue dimming. liner light. from dark to bright
4	White	White dimming. liner light. from dark to bright

4ch / 2ch

4channel instruction

No	Function	instruction
1	Master	White&Amber Master dimming.From dark to bright
2	50W × 2(1)	White dimming Liner kight from dark to bright
3	50W × 2(1)	White dimming Liner kight from dark to bright
4	Master strobe	strobe.Function speed.from slow to fast

2channel instruction

No	Display	Function
1	50W × 2(1)	White dimming.liner light.from dark to bright
2	50W × 2(2)	White dimming.liner light.from dark to bright